

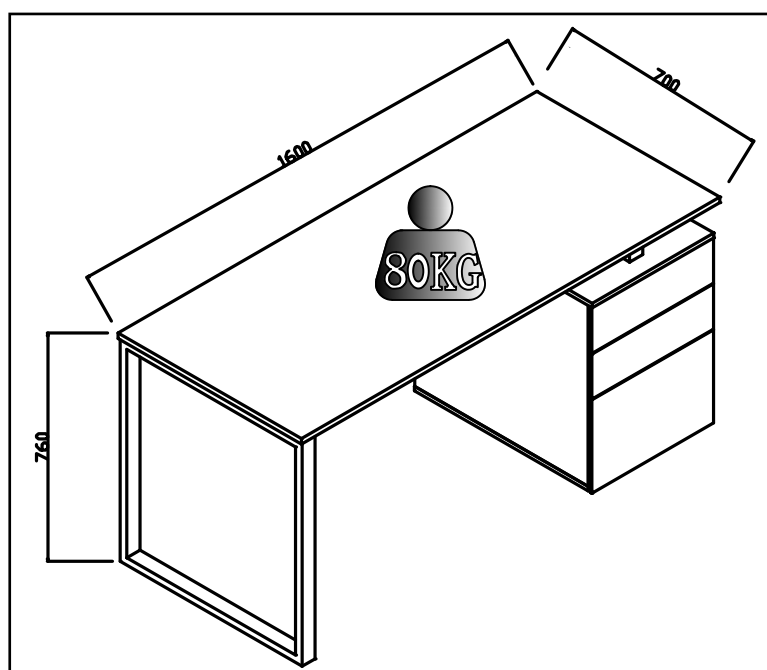
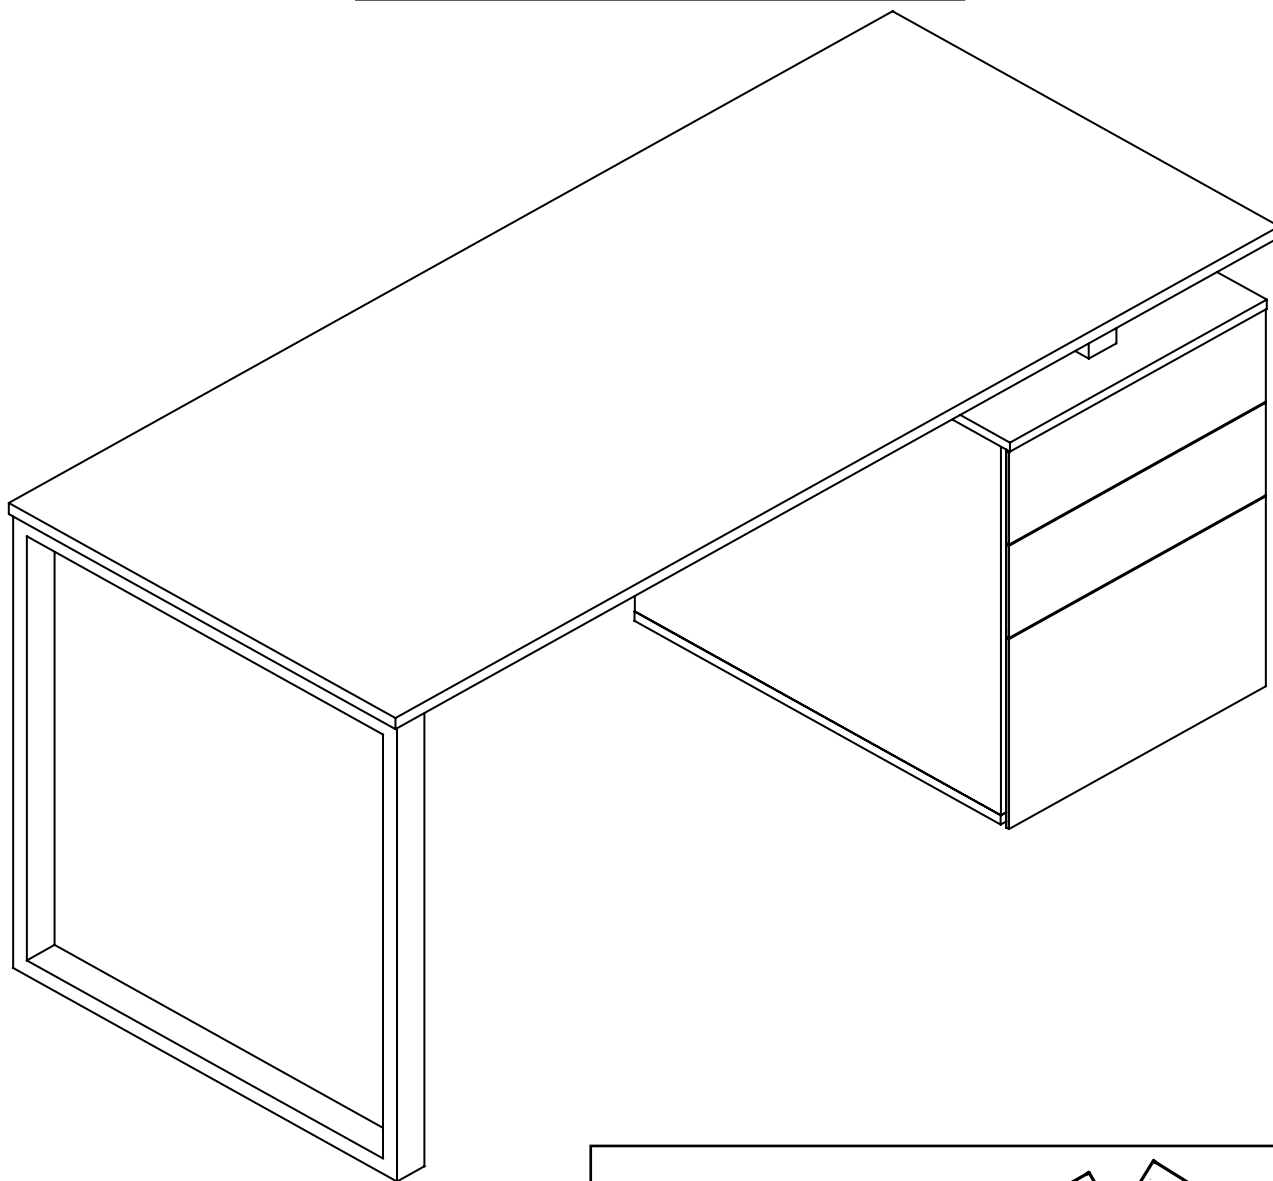
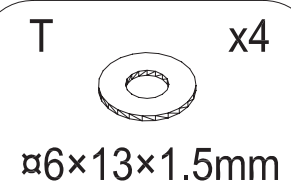
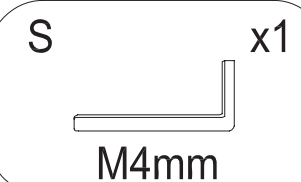
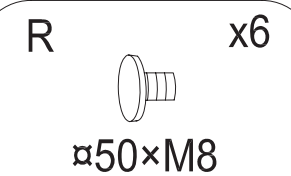
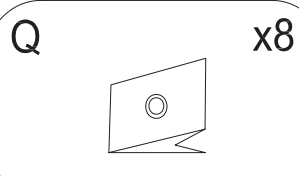
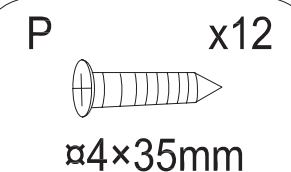
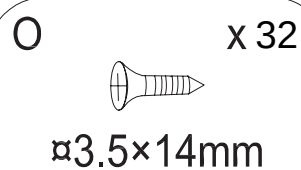
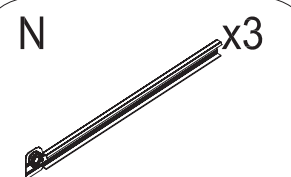
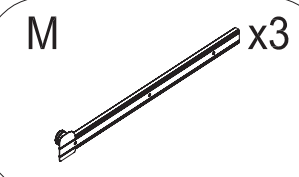
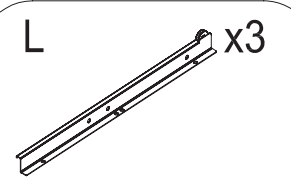
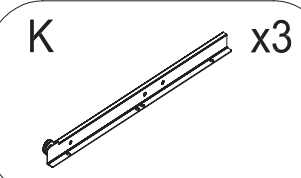
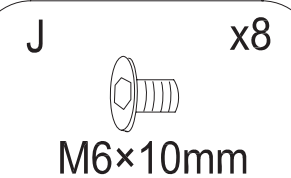
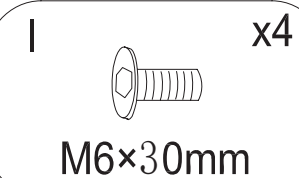
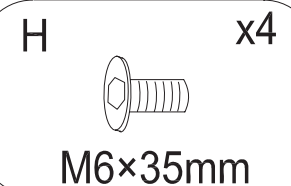
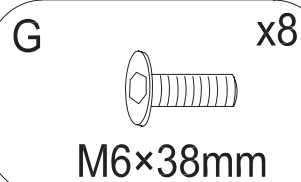
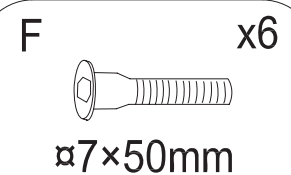
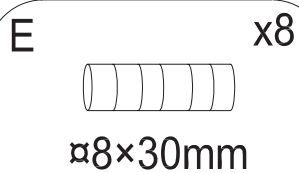
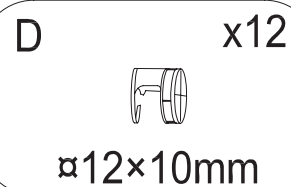
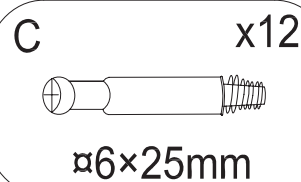
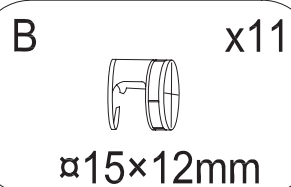
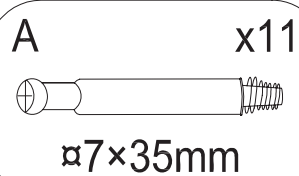
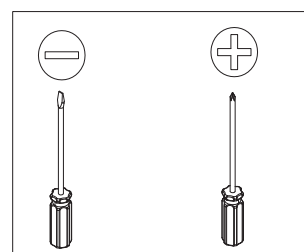
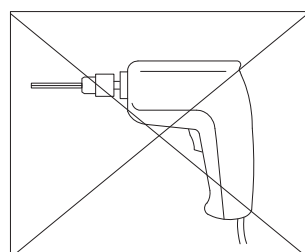
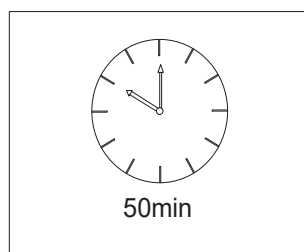



Assembly Instructions / Navodila za montažo /
Montageanleitungen

MOD NO. OSSY/STYLO

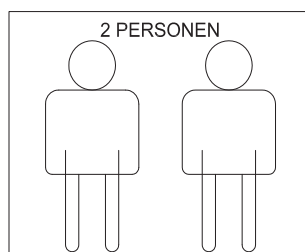

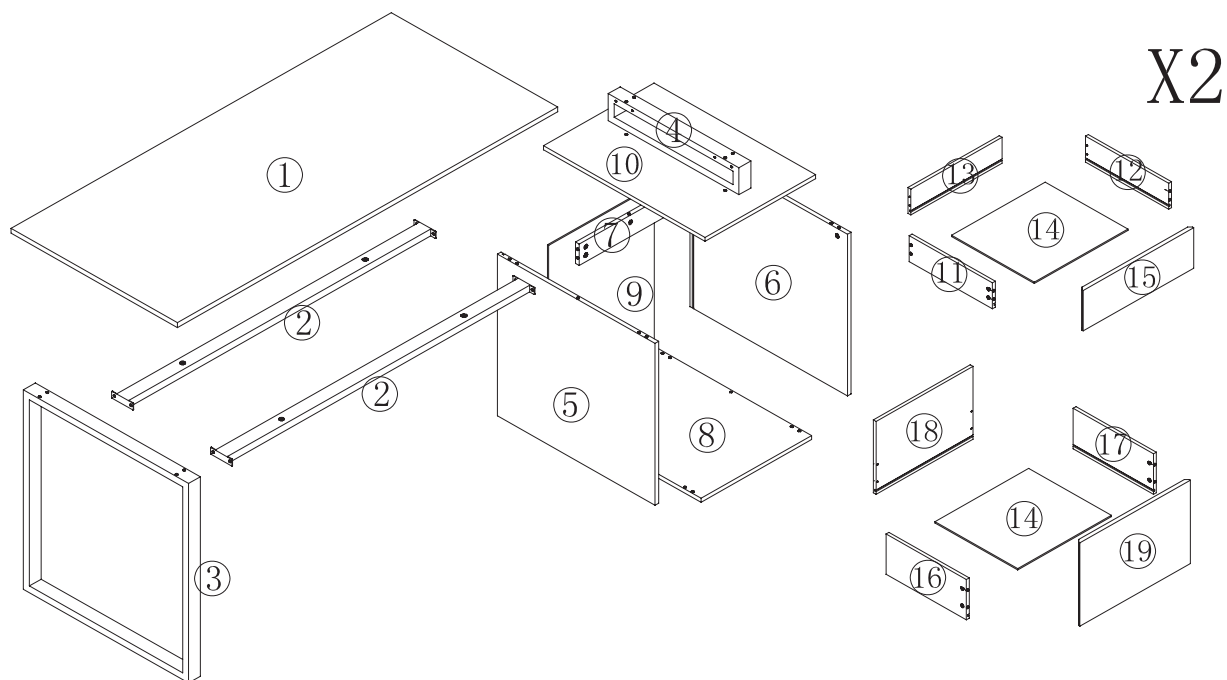

1

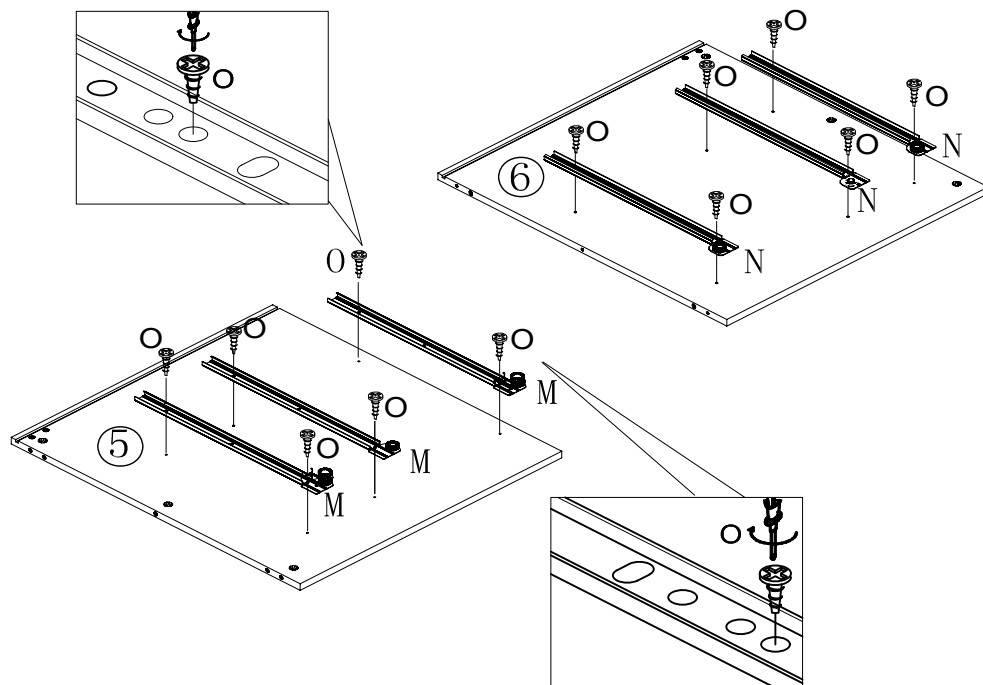


O x12

φ3.5×14mm

M x3

N x3

2

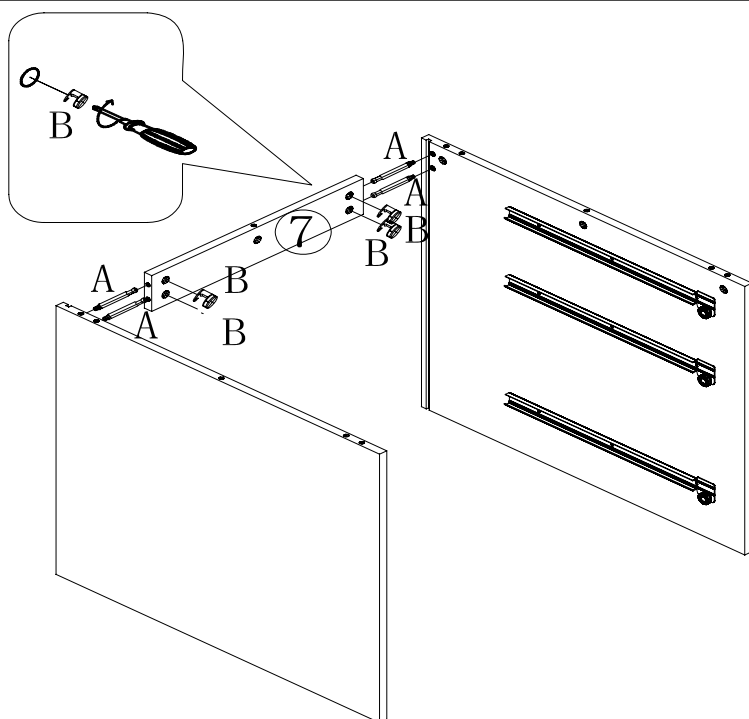


A x4

φ7×35mm

B x4

φ15×12mm

3

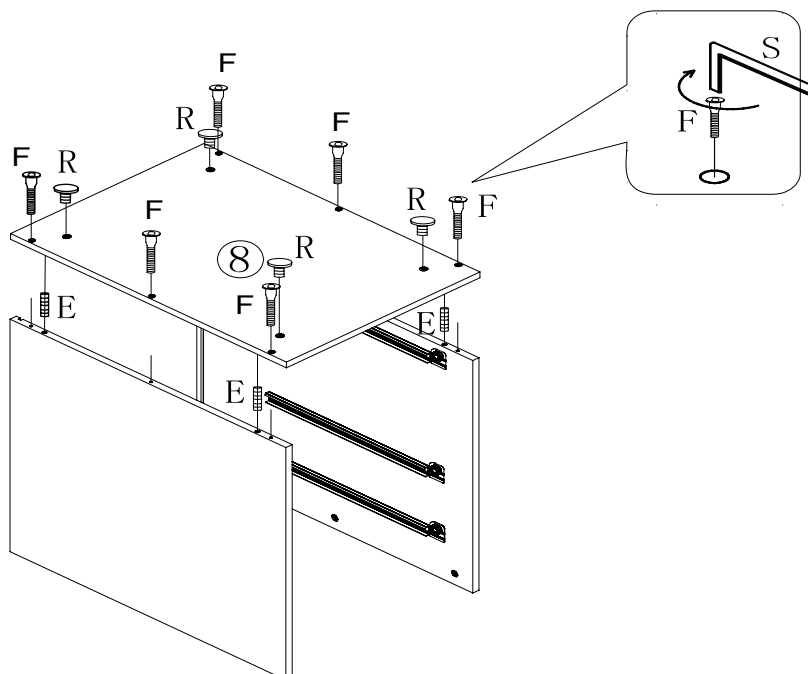

E x4

φ8×30mm

F x6

φ7×50mm


R x4

φ50×M8


S x1


M4mm


4

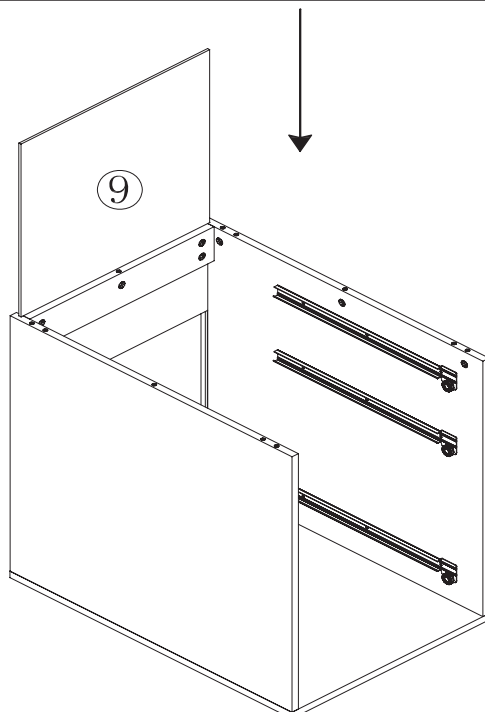


5

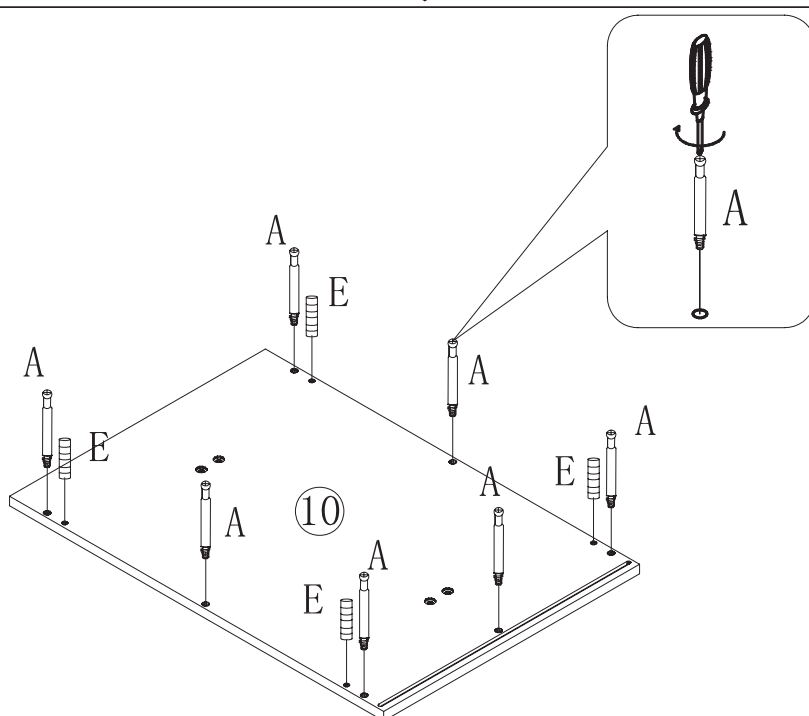

A x7

 $\varnothing 7 \times 35 \text{mm}$

E x4

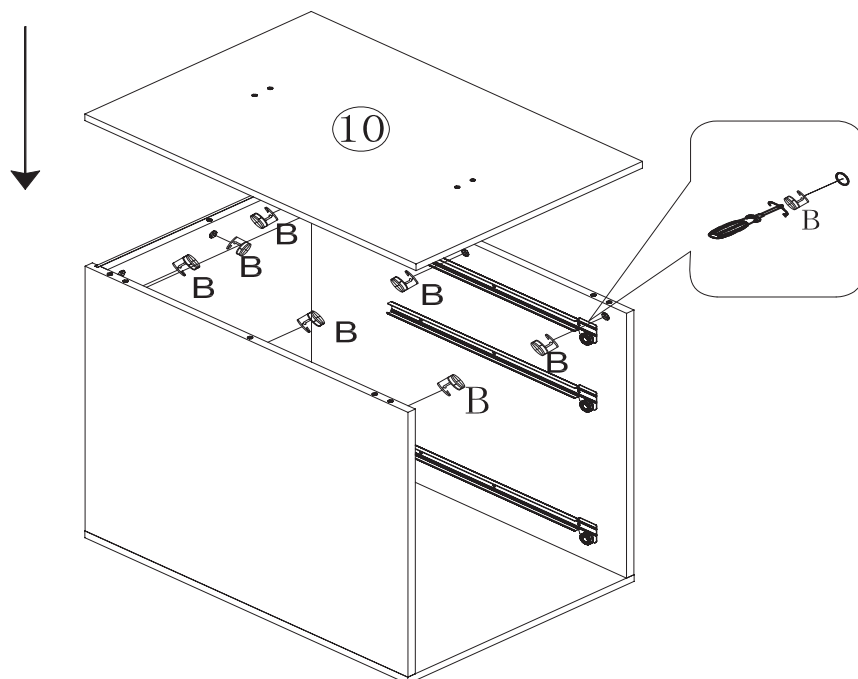 $\varnothing 8 \times 30 \text{mm}$


6



B x7

 $\varnothing 15 \times 12 \text{mm}$

7

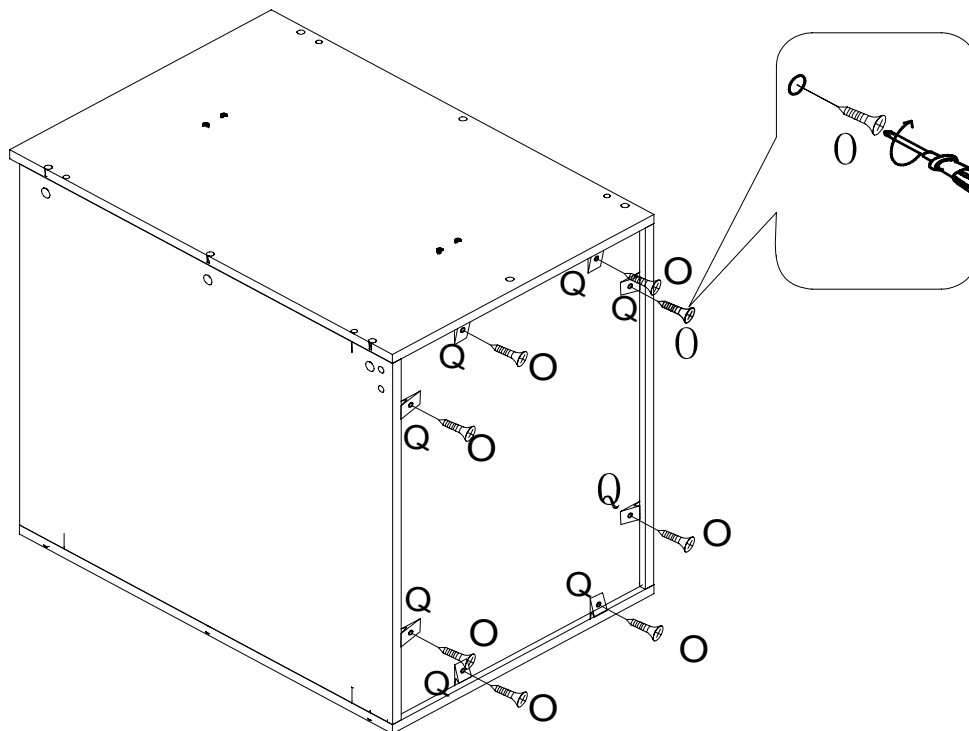

O x8




 $\varnothing 3.5 \times 14\text{mm}$

Q x8




8

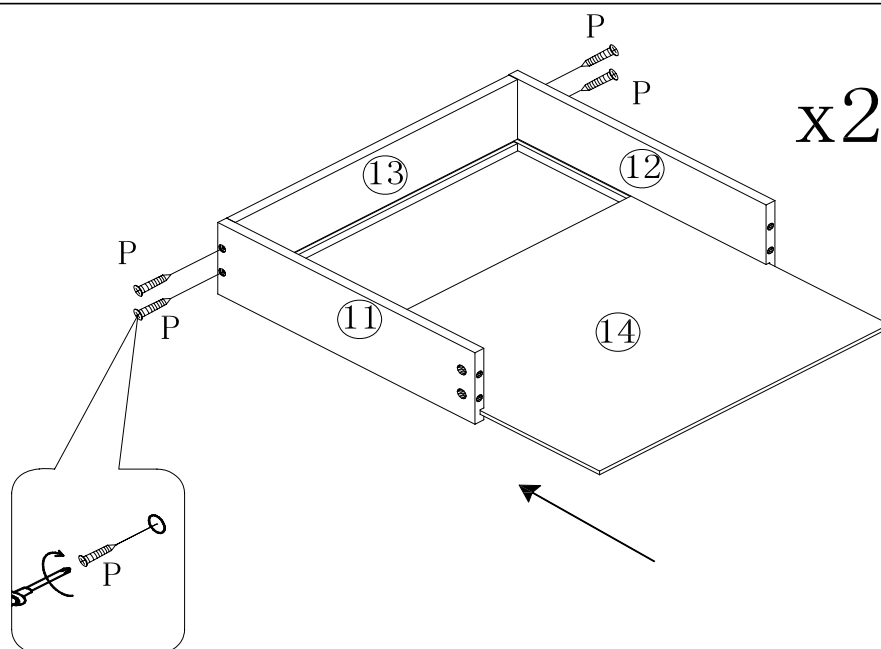


x2

P x8




 $\varnothing 4 \times 35\text{mm}$

9

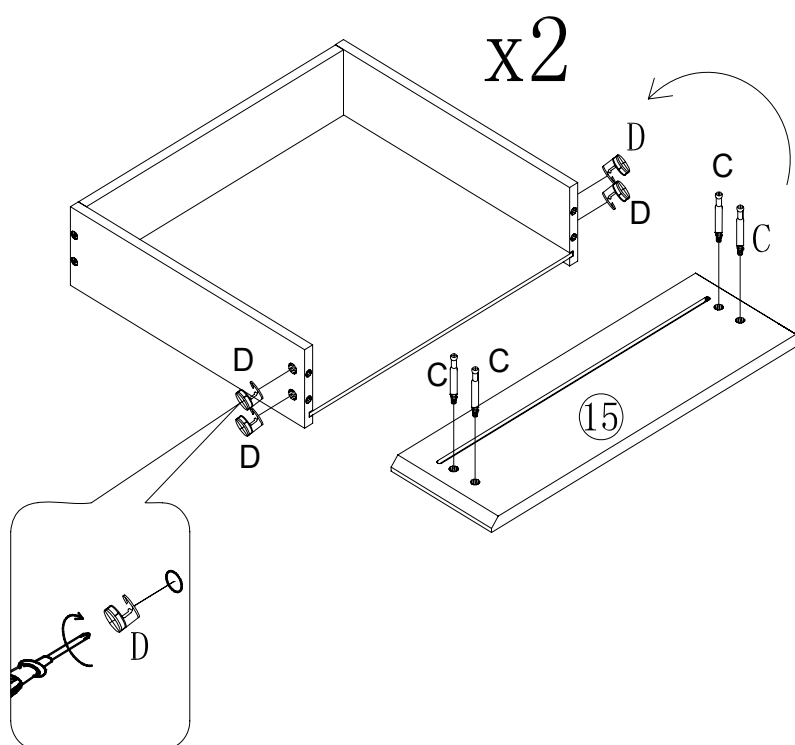

x2

C x8




 $\varnothing 6 \times 25\text{mm}$

D x8



 $\varnothing 12 \times 10\text{mm}$

10

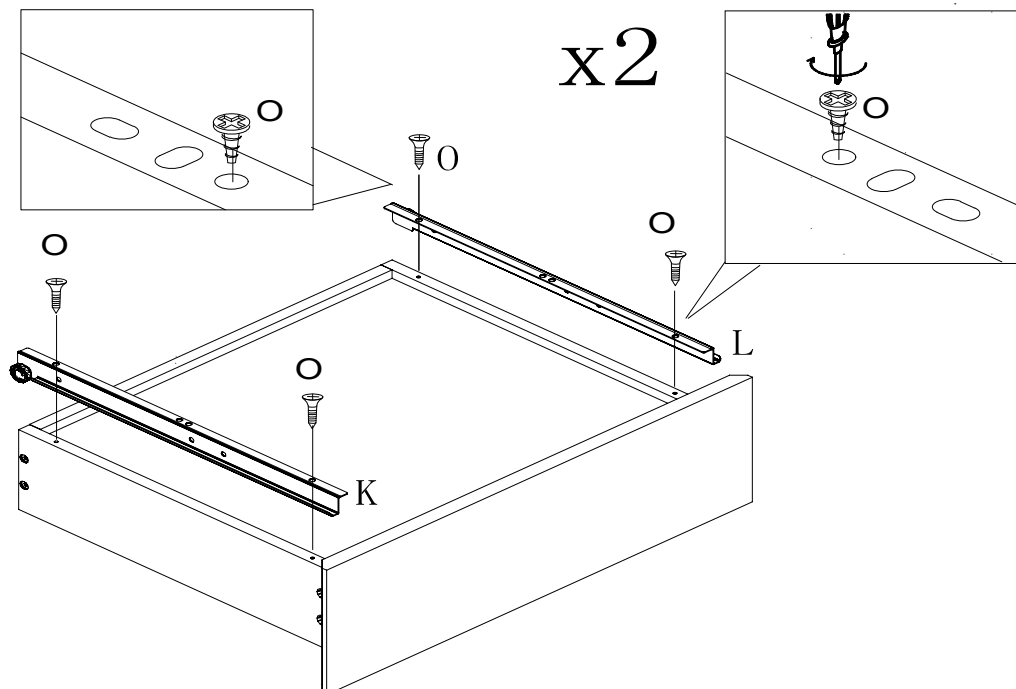


O x8
 $\varnothing 3.5 \times 14 \text{ mm}$

K x2


L x2

11

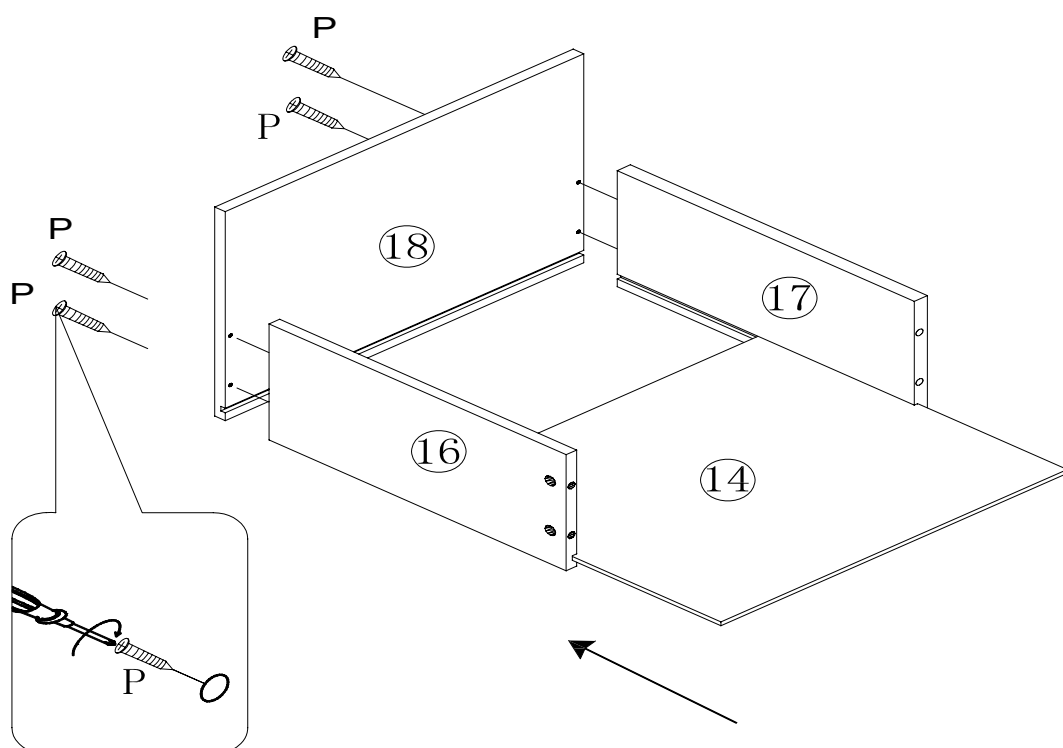

P x4
 $\varnothing 4 \times 35 \text{ mm}$


12

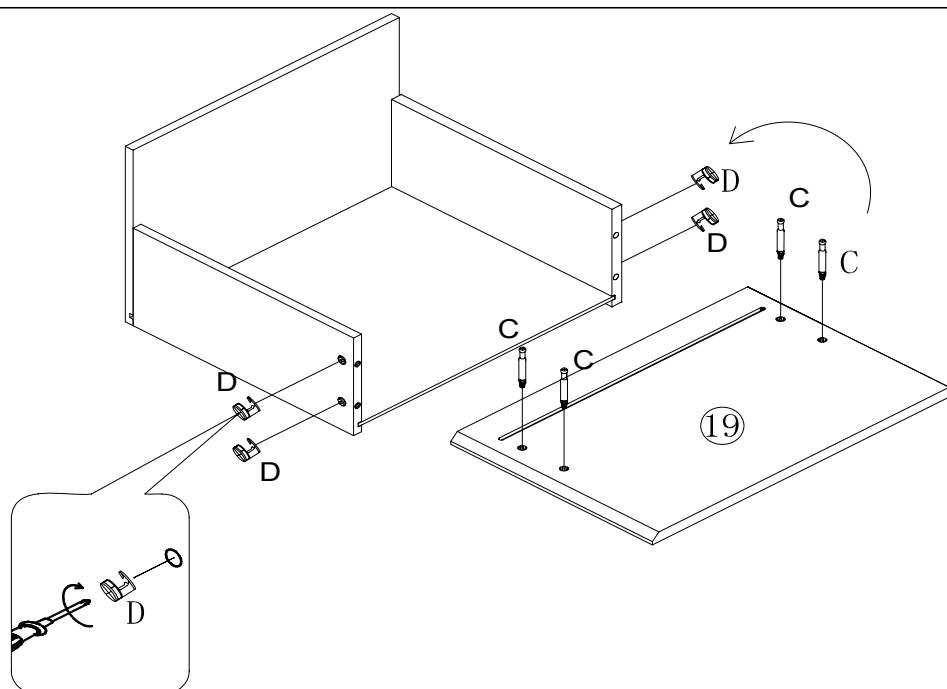

C x4
 $\varnothing 6 \times 25 \text{ mm}$

D x4
 $\varnothing 12 \times 10 \text{ mm}$

13

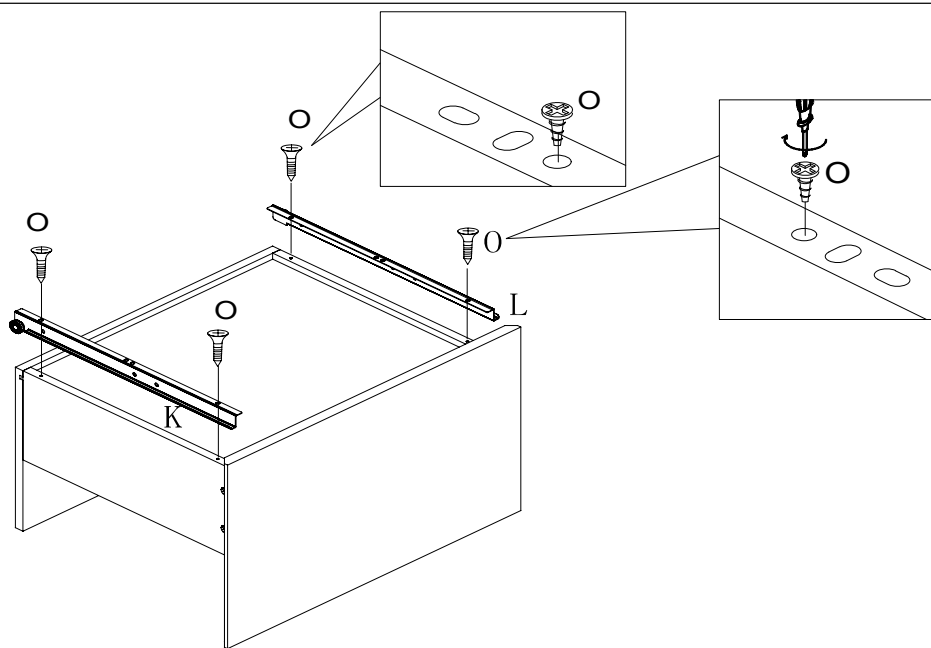


O x4
 $\varnothing 3.5 \times 14\text{mm}$

K x1

L x1


14

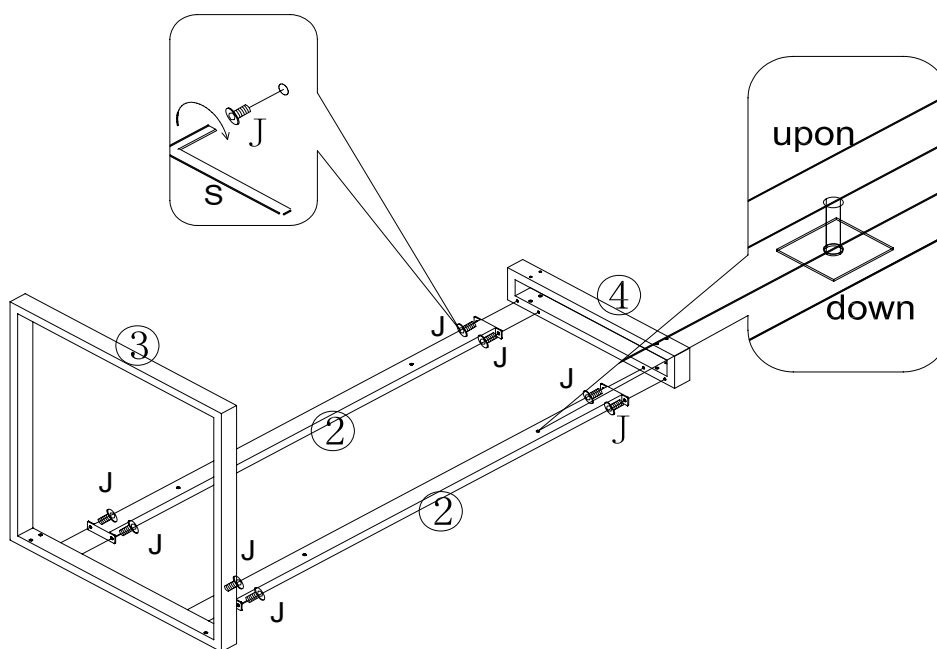

J x8
 $M6 \times 10\text{mm}$

S x1
 $M4\text{mm}$

15

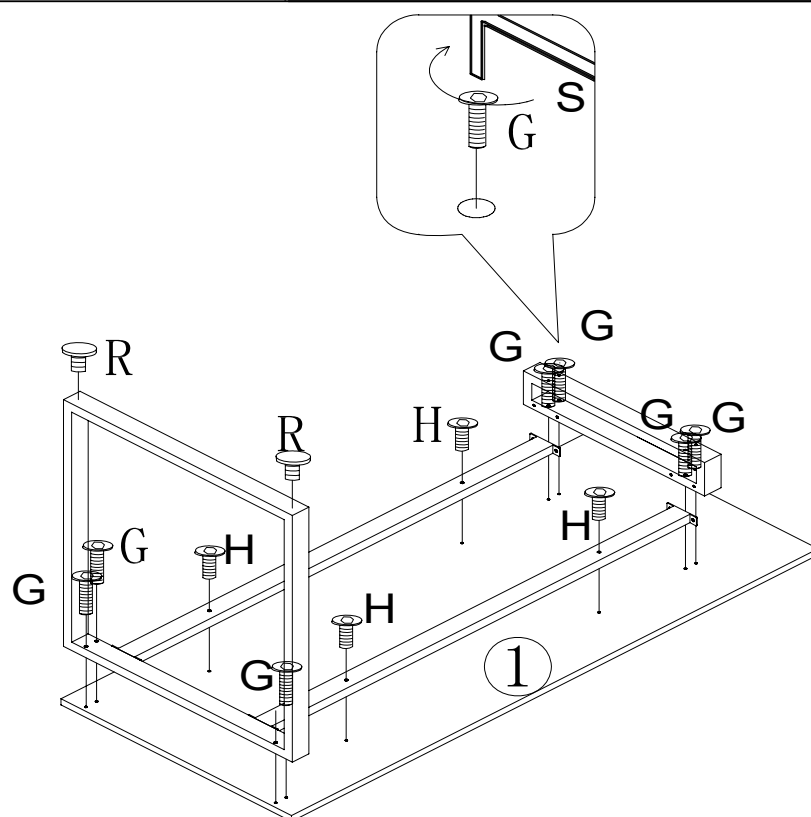


G x8
 $M6 \times 38\text{mm}$

H x4
 $M6 \times 35\text{mm}$

R x2
 $\varnothing 50 \times M8$

S x1
 $M4\text{mm}$

16

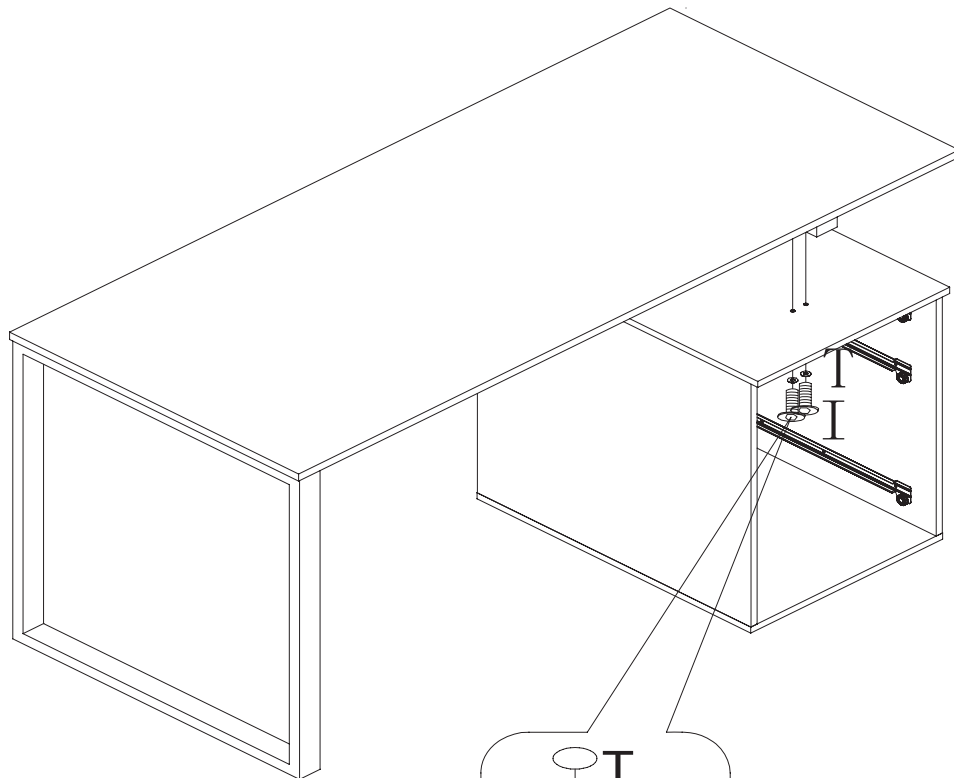


I x4



M6×30mm

T x4




φ6×13×1.5mm

S x1



M4mm

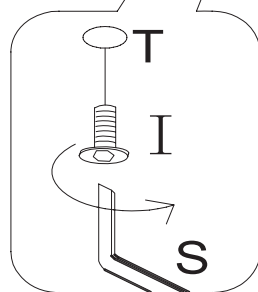

17

